


Rotary Valve with axle



Insert the metal axle into the rotary piece and ensure that the square end of the axle is flush with the rubber.

1

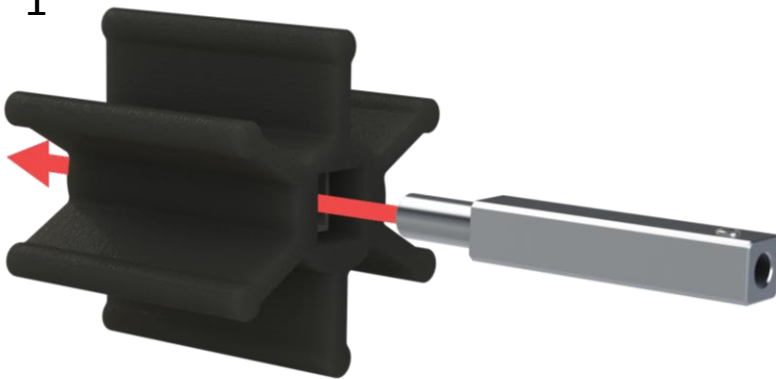

2




If the axle when inserted is not flush with the rubber end of the rotary piece, take the axle out and reinsert it from the opposite end.

1



2

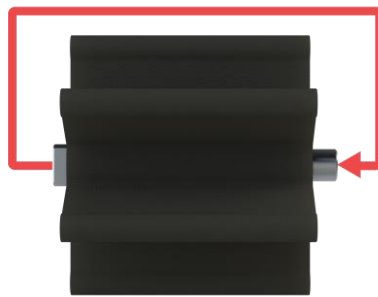

3

